Standard Cyberamic Glove

Assembly guide

Notes:

-These patterns are meant to be printed on A4 paper
-Print the entire Pdf,not just certain pages,so that they get printed at 1:1 scale(printing just certain pages for some reason makes everything slightly bigger)
-Make sure when printing,in the settings set is as „fit to paper" not „fit to printable area" so the patterns get printed at full size
-Do not cut the borders of the pages
-Good Luck :)

Materials:

- Fur ~1 yard (~1m^2)
- Lining(Check page 8)
- Black fabric(PTT:Stretchy terry cloth
90s:Felt)
- Velcro

Pattern assembly:

-Simply tape the pieces togheter

-If there are any borders on the images do NOT cut them

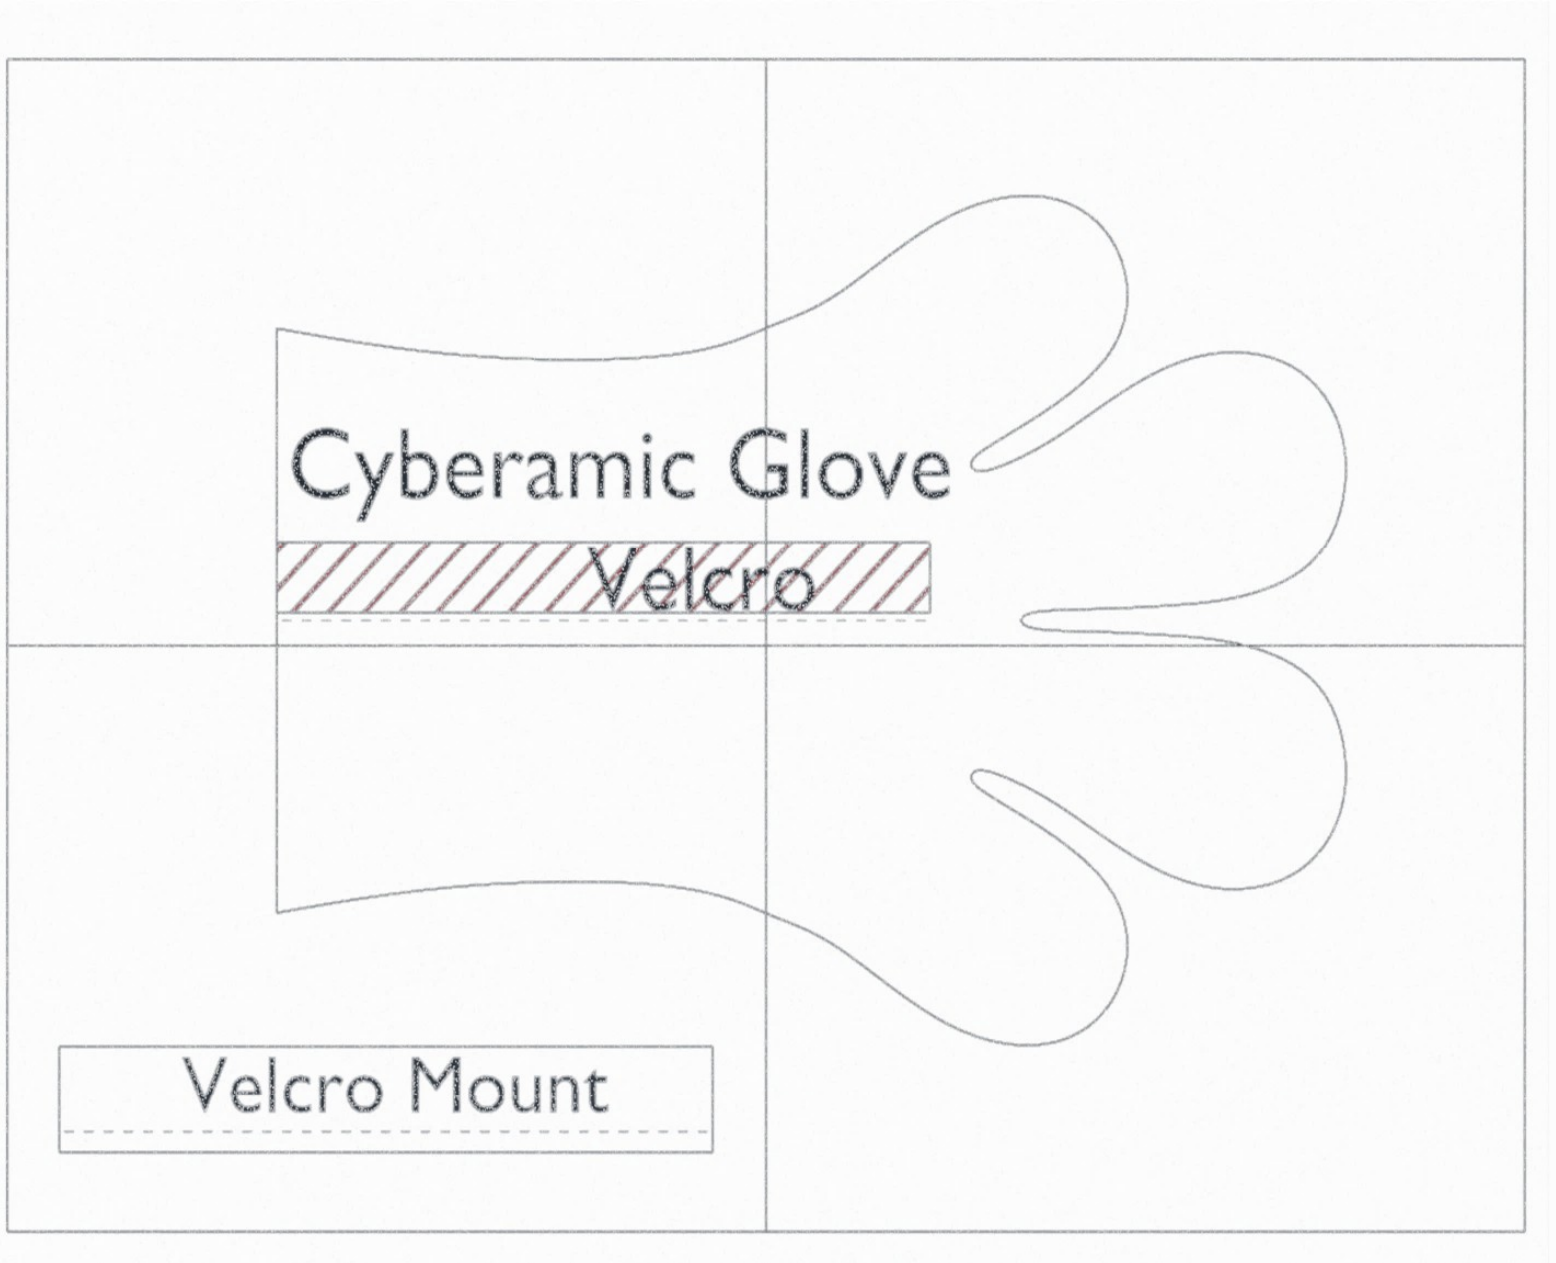

Step 1.Print

-Print the pdf

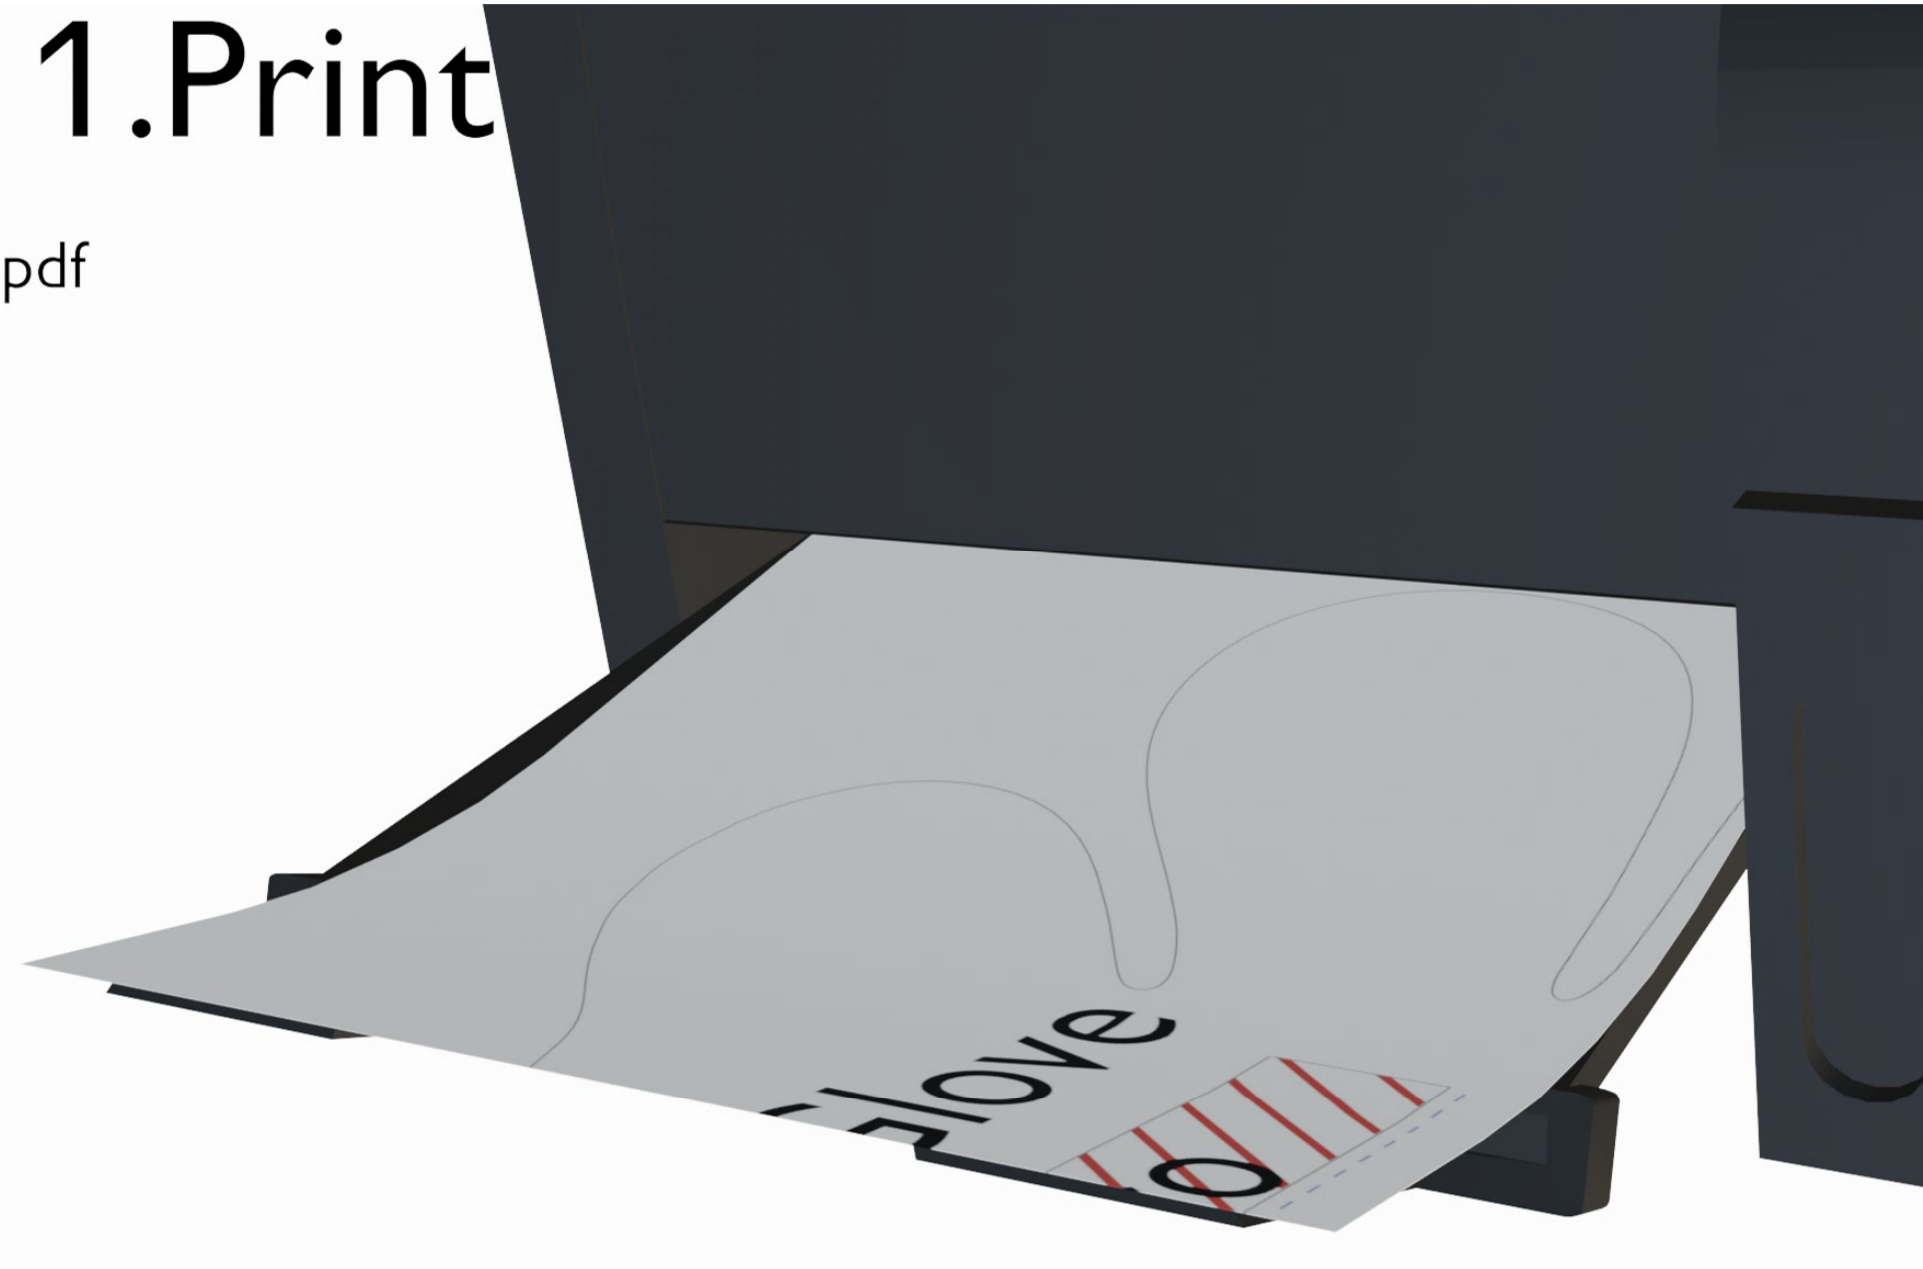

Step 2.Cut the patterns

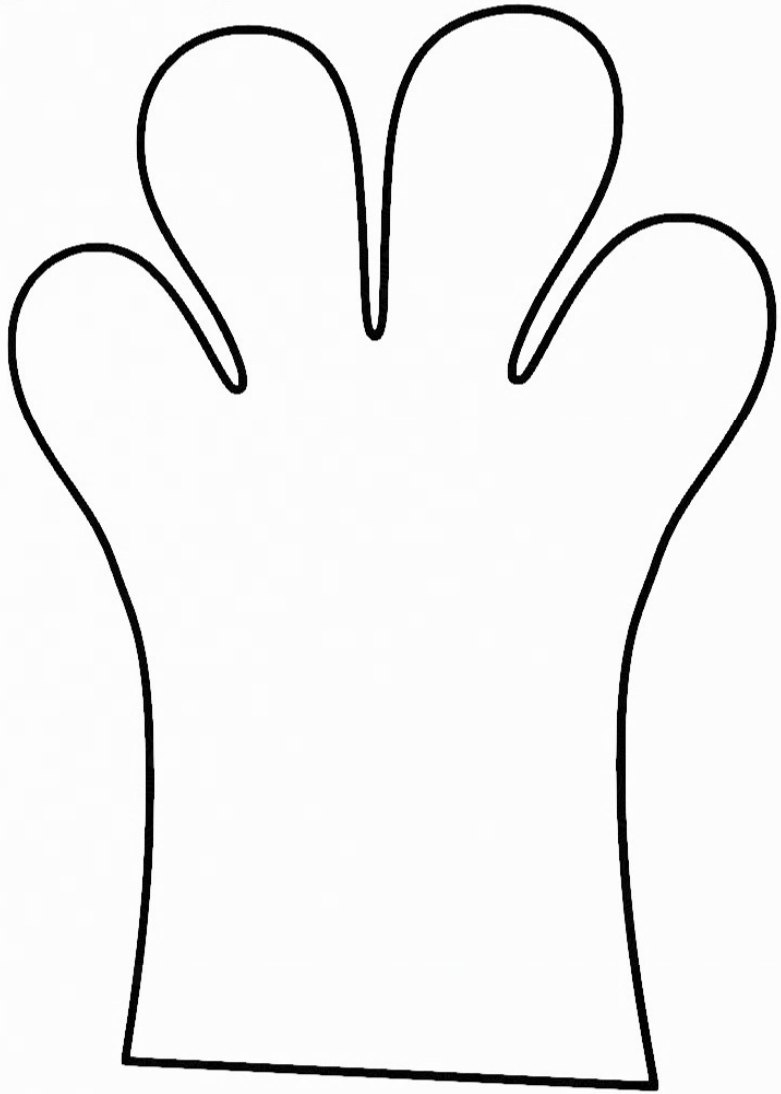

Step 3.Cut the fur

-When cutting the fur,use an exacto knife
to slice the base of the fur from the back

Step 4:Lining

-Inside the cyber gloves there's typically a layer of extra fabric that acts as both a protection for the fur against the mech hand and as padding to give the hand shape

-This lining was changed many times,creating multiple vesrions of the gloves, though all of them used the same patterns.These versions are:

- 1979/Fantasy Forest:
  - -These gloves have no lining inside and are simply 2 pieces of fur sewn together,
  - -These were phased out pretty quickly as they look very thin and fake when installed on a bot
- 1980's/PTT
  - -These gloves are lined with a layer of 1/8" black foam on each side
  - -These were phased out in the 90's as the foam would rot and turn to dust
- 1990's
  - -These gloves are lined with a layer of white neoprene
- 2000's
  - -These gloves are lined with a layer of a black rubbery material,thought to be black vinyl backed fabric
- 2010's
  - -These gloves are lined with a layer of air mesh foam

Step 5:Assembly

-Cut out the 2 fur pieces and place them on top of eachother with the fur on the inside
-Add whichever lining you're using
-Sew all the pieces togheter into one piece

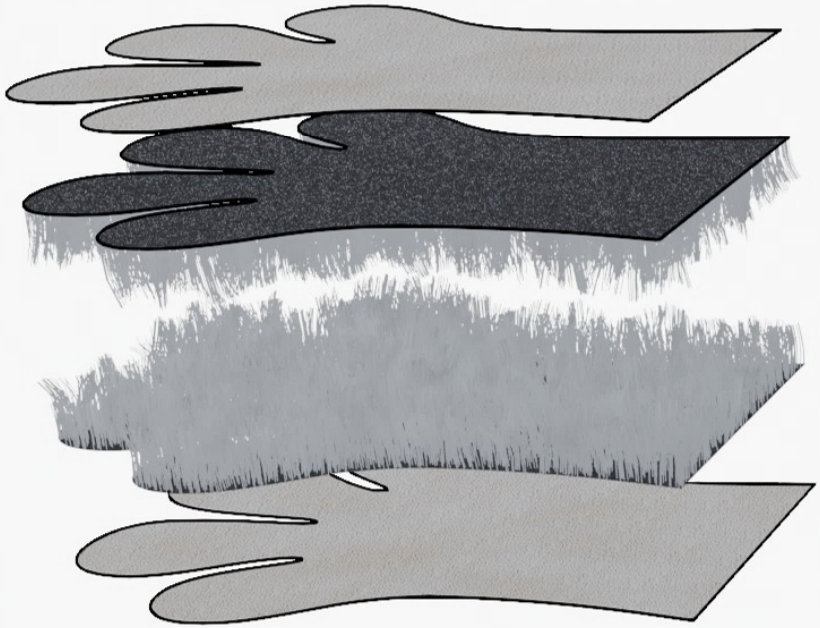

Step 6:Velcro mount

-If you're making a 79 hand skip this step
-On the side of the glove you've chosen to be the back cut a slit up to where the pattern specifies
-On the left side of the slit attach the velcro mount which you will cut out of black fabric
-On top(or bottom from this perspective)of the velcro mount attach the velcro
-On the right side of the slit attach the opposite side of the velcro

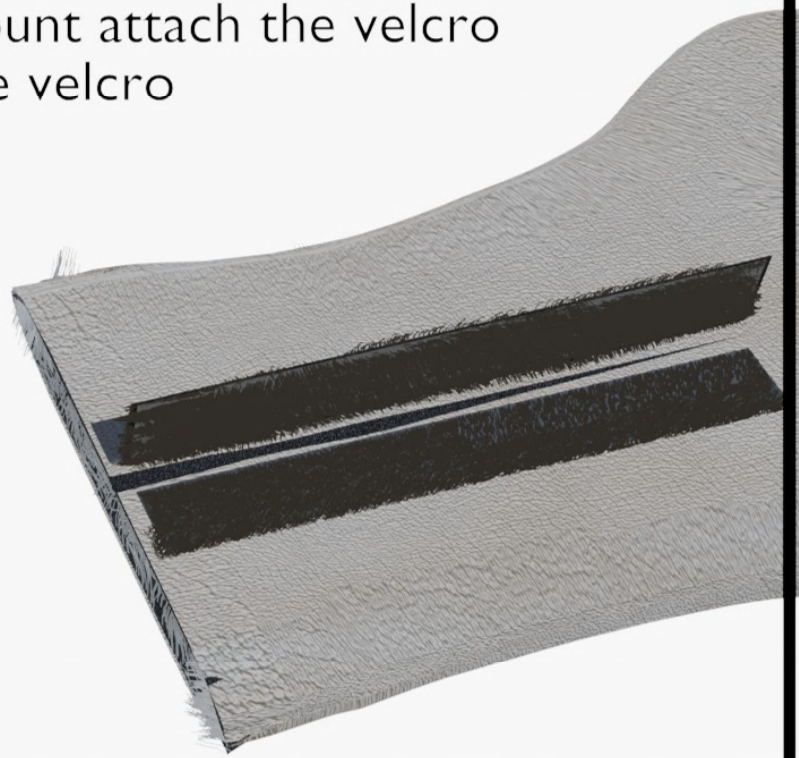

Step 7:Turn the hand inside out

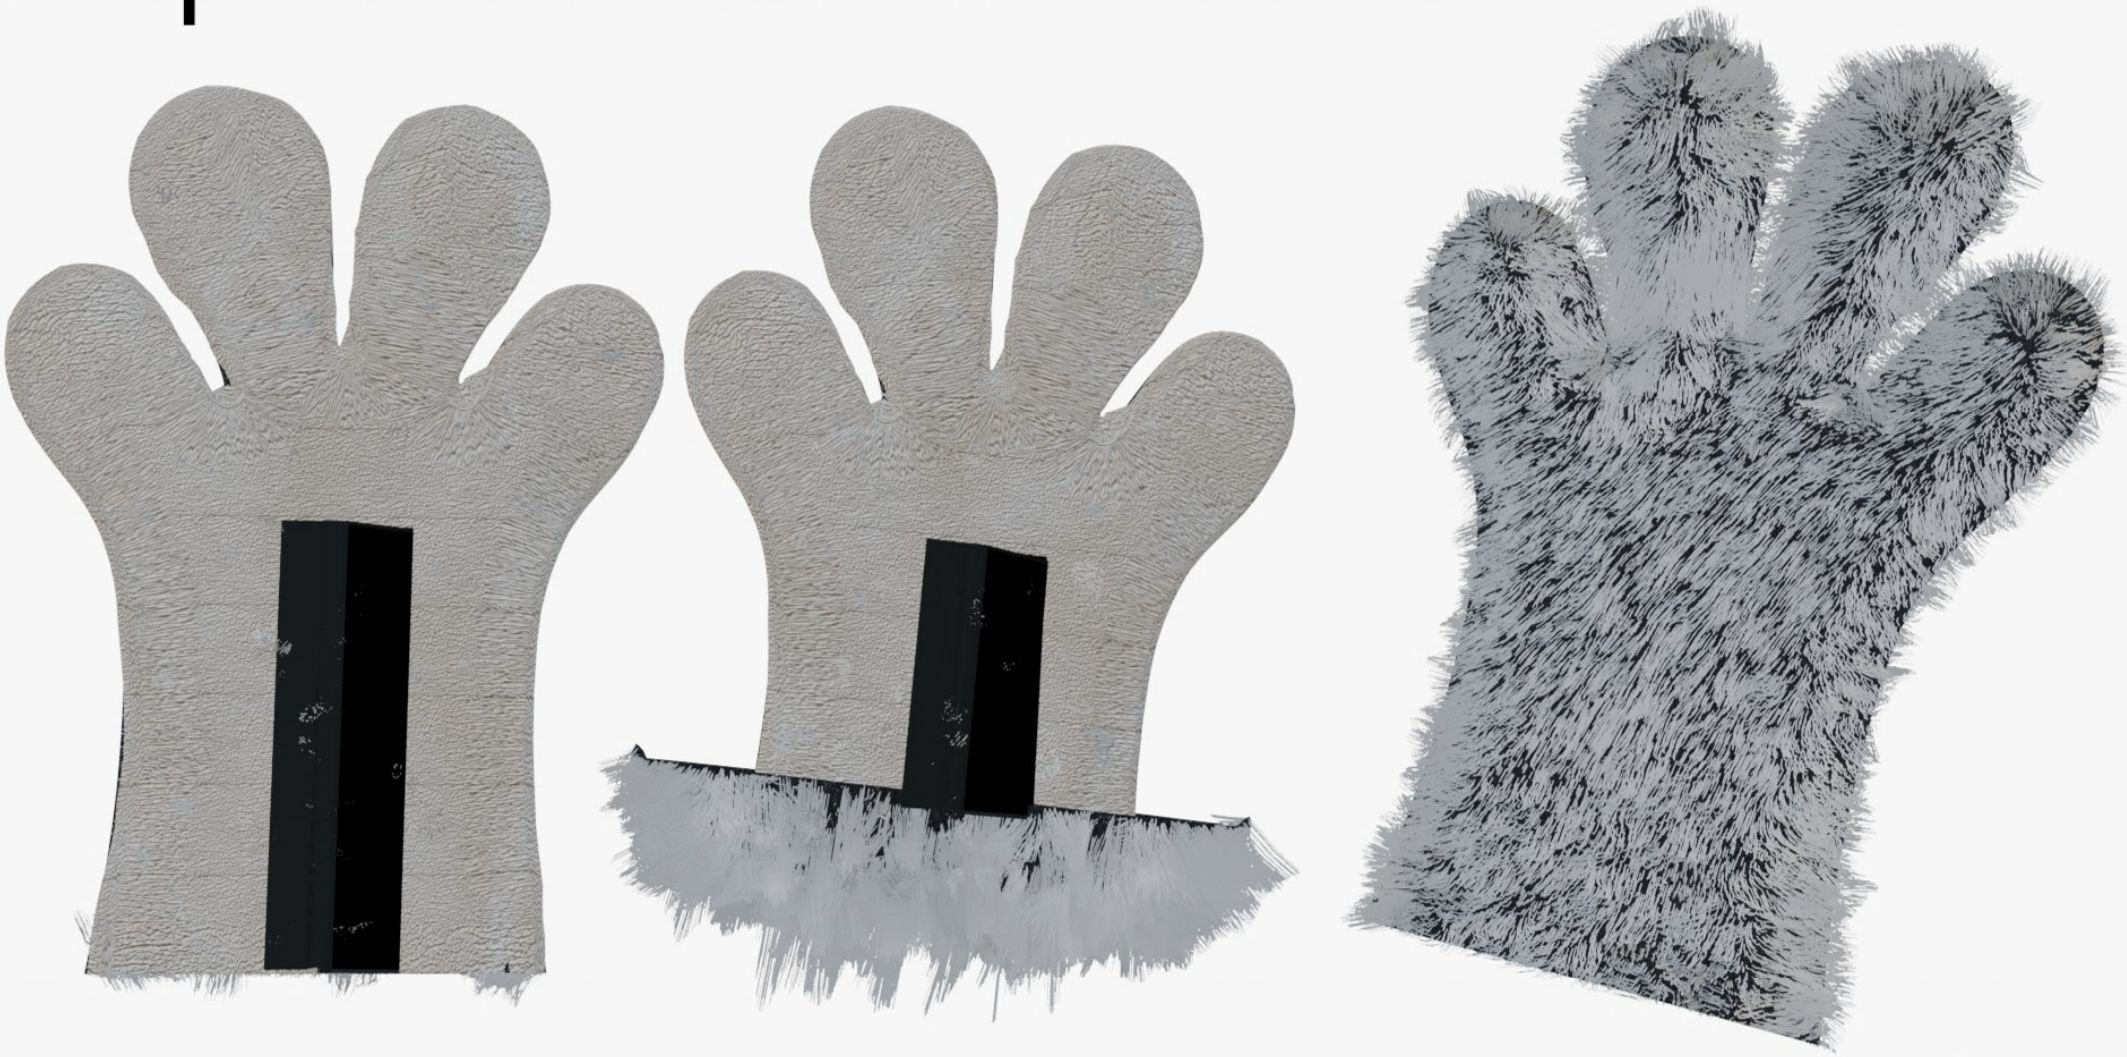

If you're making a King hand

-Once you turn it inside out add a ring of velcro at the bottom of the hand

Congratulations!You have just finnished the Gloves!

-Give yourself a pat on the back!